

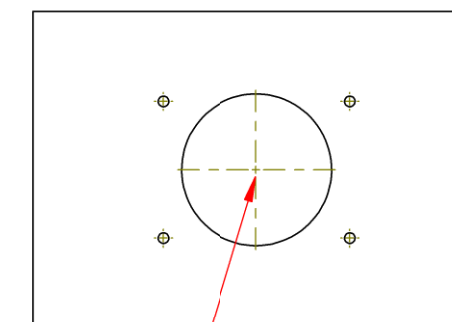


1. Set the position.
2. Drill a $\varnothing 100\text{mm}$ bore hole exactly in the center of the washtop.
3. Fixing bolts: please use the provided drilling template. Make sure, that the drilling template is parallel to the front edge of the washtop.
4. Mark the holes according to the drilling template and drill 4 holes $\varnothing 7\text{mm}$ dia.
5. Position and align the washbasin.
6. Fasten the washbasin by using the screws provided. Please note :
Provided srews are only suitable for 40mm board thickness.

template A4

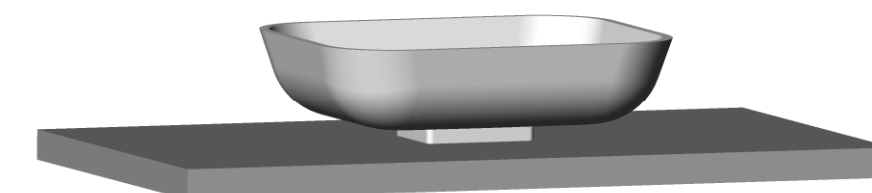

center of the washbasin

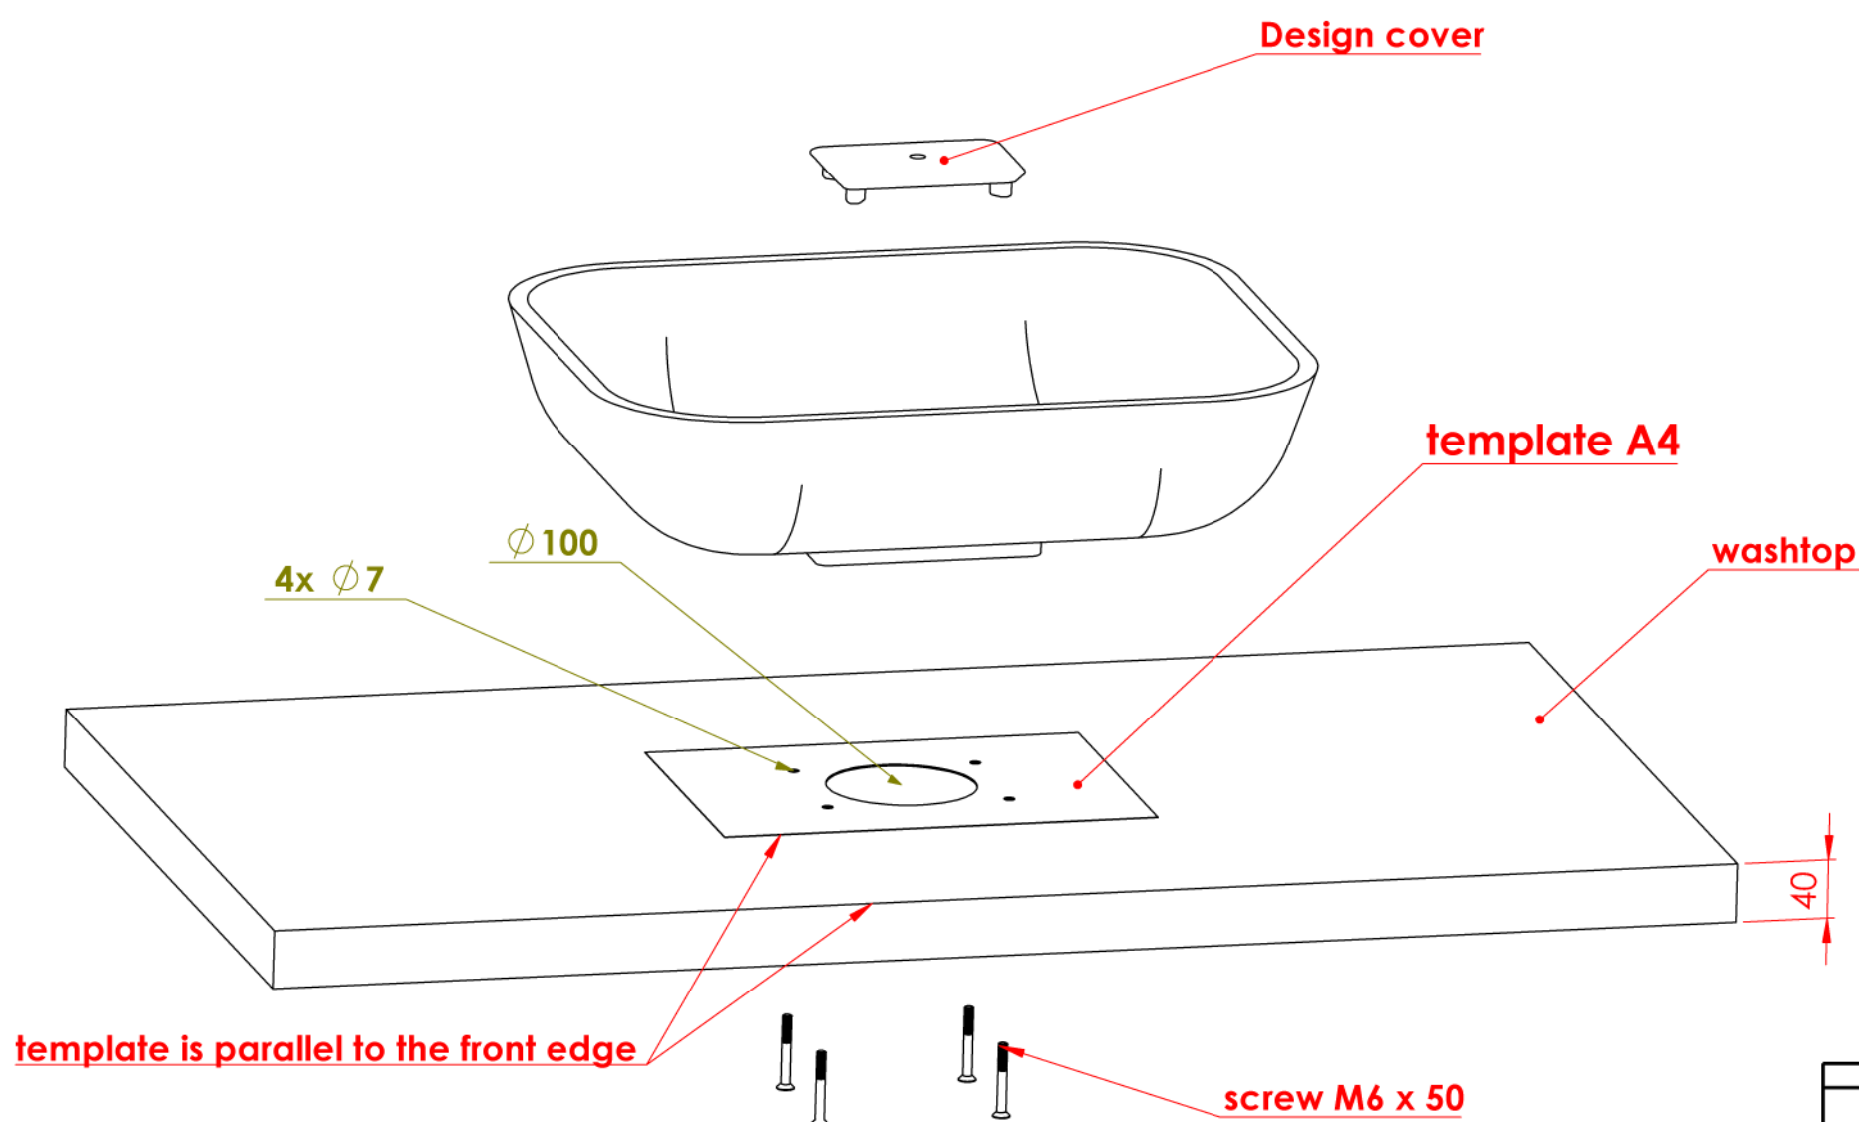

Perspektive 1:10

Index	Änderung	Datum	Name

pfeiffer www.pfeiffer-germany.de Pfeiffer GmbH & Co.KG Emmeliusstraße 21 D-35614 Asslar Tel.: +49 (0)6441 / 9833-0 Fax.: +49 (0)6441 / 9833-30				Customer:	
				Kommission:	
Gez.:	PKU	25.11.2020		Colour:	Maßstab: 1:5
Gepr.:				Material:	
Änderung:				Order.:	Blatt:
Eingang:				Type.: Assembly Instructions VDQ_Top	